



*Racing Specialities*

# Emergency Release Tab

## Cheek Pad Removal System Emergency Release Tab Instructions

Removal of a helmet from an accident victim should be performed only by rescue personnel trained and experienced in the process of helmet removal. The Emergency Release Tab can assist in the removal of the cheek pads, allowing rescue personnel to remove the helmet more easily from an injured rider. The tabs are labeled with an orange tag below the cheek pad.



**Use of the Emergency Release Tab should be performed by rescue personnel experienced with the process of helmet removal, with adequate understanding of the Emergency Cheek pad system as there may be instances where removal of the cheek pads by the Emergency Release Tab is not an effective measure based on the accident situation or condition of the injured rider.**

Specifications Subject to Change Without Notice.

Contacts: ARAI HELMET, LIMITED  
12 Azuma-cho, 2-Chome  
Ohmiya, Saitama 330-0841  
JAPAN

ARAI HELMET AMERICAS, INC.  
P.O. Box 787  
Fogelsville, PA 18051-0787  
U.S.A.  
info@araiamericas.com

ARAI HELMET (EUROPE), B.V.  
Zuiderinslag 10  
3871MR Hoevelaken  
THE NETHERLANDS  
info@araihelmet.eu

# Cheek Pad Removal by Emergency Release Tab

Rescue personnel should unfasten or cut the chin strap and stabilize the helmet and rider's head inside.

## 1 Locate the Emergency Release Tabs


Inspect the helmet on the injured rider and locate the orange Emergency Release Tabs.



## 2 Extend the Emergency Release Tab Pull Strap


Gently pull the Emergency Release Tab label to reveal the hidden strap.

## 3 Loop Your Finger Through the Strap

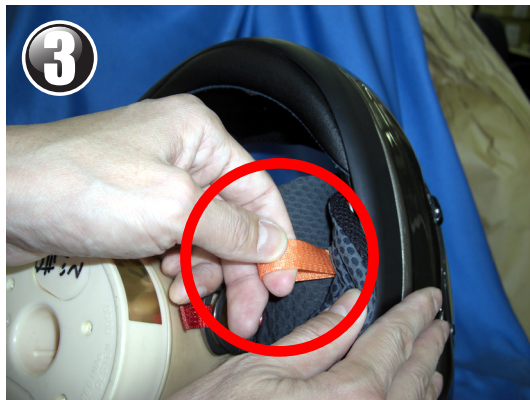

## 4 Pull the Emergency Release Tab

First, support the helmet securely to prevent the rider's head from moving. With your finger through the strap, gently pull until the cheek pad unclips from the helmet (see illustration below).

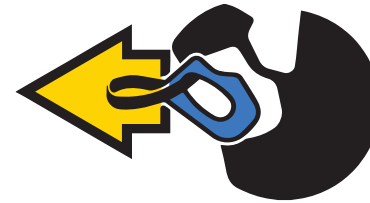

## 5 Remove the Cheek Pad

Pull out the cheek pad completely. If the neckroll is attached, you will need to unclip the tab from the cheek pad.



## 6 Complete Cheek Pad Removal

Repeat the same steps to remove the other cheek pad.

